

User Manual



US - V1

Thank you for purchasing the Portable Heater.

This portable and easy to use heater can be placed in your home, office, or anywhere you please. It's highly energy-efficient and simple to use, just plug it in and enjoy the warmth.

WARNING: DO NOT LEAVE PORTABLE HEATER UNATTENDED, ESPECIALLY IN THE PRESENCE OF CHILDREN OR PETS.

Care and Maintenance


To clean, allow your Portable Heater to cool completely. Then, wipe the exterior with a soft, damp cloth. Then, let air-dry or dry with a dry, soft cloth.

Important Safety Instructions

Read all instructions before using this heater.

Get in Touch

Have questions about our products? You can contact our helpful customer service team by going to: <https://support.blastauxiliary.com/hc/en-us> or by scanning the QR code on the right. We're always happy to help!

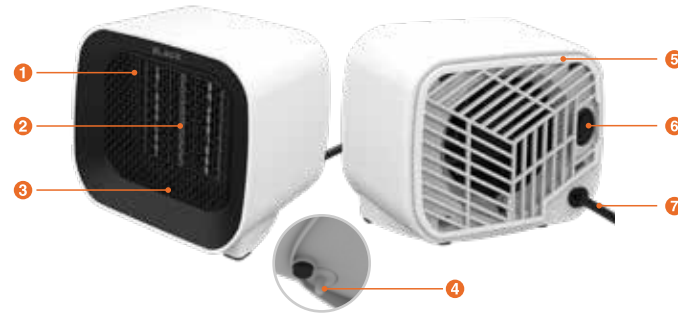

- 1 Hot Air Outlet
- 2 Ceramic Heater
- 3 Power Indicator

- 4 Tip Over Safety Switch
- 5 Air Inlet
- 6 Main Power Switch ON/OFF
- 7 Power Cord

Product Specifications

Rated Voltage: 120V~50/60Hz
Watt: 450W

Quick Use Guide

1. Plug the power cord into an outlet
2. Power on using the switch at the back

Note and Caution:

Tip over safety switch: There's a tack switch on the base of the unit, if there's a tip over the switch will turn off the power of the heater to prevent fire. At this point, the user will need to make sure the heater is sitting on an even and flat surface and turn on the heater again for additional safety reasons.

Thermal-Protection: If the heater malfunctions and the internal temperature reaches 250°F/121°C, the thermal fuse will be blown, and the entire heater will not turn on again. Contact customer support and do not modify or take apart the heater by yourself.

Over-Current Protection: If the current running through the Portable Heater is above 15A, the circuit fuse will be blown, and the entire heater will not turn on again. Contact customer support and do not modify or take apart the heater by yourself.

Warning

- Do not leave the heater unattended, especially with children or pets present.
- Always unplug heater when not in use.
- Do not use the heater if the power cord has been damaged or appears frayed.
- Keep heater away from water.
- Do not use the heater in the bathroom and kitchen where there is water.

- Do not cover the heater with clothing or other easily-flammable material.
- Turn the main power switch off at the back of the heater to completely switch off the device.
- Do not insert any objects into the air vents and it may cause damage and shock.
- To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use on soft surfaces, like a bed or couch where the opening can be blocked.
- Do not use the heater around flammable materials like gasoline, paints, etc.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause a fire, electric shock, or injury.
- Do not hang heater on wall.
- Do not block air intake.
- The heater can only operate sitting on a stable, flat surface.
- Children should not operate this heater without adult supervision.
- Do not use outdoors.
- Do not attempt to touch the air outlet or disassemble the device while hot.
- When hot, hold the back handle or a cool side of the unit to move the heater.
- Make sure that your outlet voltage corresponds to voltage marked on the rating label or the heater.
- The heater should only be used with wall outlets.

- Do not use alcohol, furniture polish, or abrasive powders to clean the heater as it may damage it, cosmetically, or in terms of performance/ safety.
- If the device has been cleaned, wait until it's completely dry before use.
- Store the device in a cool, dry place when not in use, and ensure it's not plugged in.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



At the end of its service life, this product may not be disposed of in the normal household waste, but rather must be disposed of at a collection point for recycling electrical and electronic devices. The materials are recyclable according to their labelling. You make an important contribution to protecting administration where the appropriate disposal facility is located.
Subject to change.